

IMPORTANT FITTING NOTICE

PLEASE READ BEFORE FITMENT

When removing the old unit, take note of the position of the locating dowell and ensure the locating dowell on the new unit is fitted in the same position i.e. in either position A or B depending on the application.

If a dowel was not supplied, the old one must be reused.

Fitting the starter with the dowell in the wrong position or failure to fit the dowell will result in poor engagement, excessive noise or damage to the flywheel ring gear.

Failure to fit the dowell will result in any subsequent warranty claims being invalidated.

